


GB

- A. Programme selector
 B. "Temperature" button °C
 C. Temperature display
 D. "Variable spin" button
 E. "Start delay" button
 F. Time display
 G. "Start/Pause" button

PROGRAMME CHART

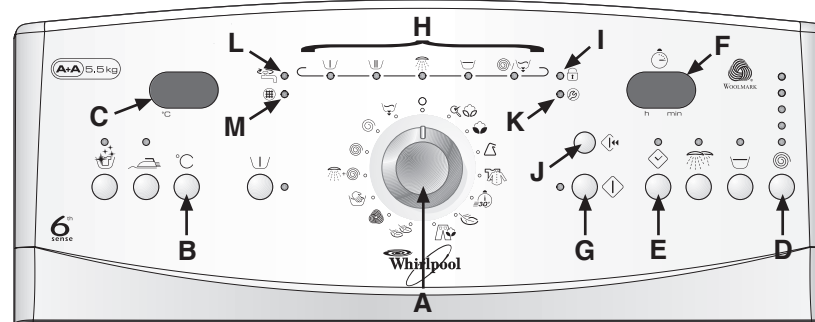

H. Programme sequence indicator

I. "Door open" indication

J. "Reset" button

This washing machine is equipped with automatic safety functions which detect and diagnose faults at an early stage and react appropriately:

K. "Service" indication

L. "Water tap closed" indication

M. "Clean filter" indication

Programme	Temperature	Care Labels	Max. Load kg	Type of wash / Notes - for temperature selection, respect the manufacturer's recommendations on the care label	Detergents and Additives					Special options					Max. Spin Speed rpm
					Pre-wash	Main Wash	Softener	Clean+	Easy ironing	Pre-wash	Start delay	Intensive rinse	Rinse Hold	Variable spin	
White Cotton / Antibacterial	70 - 95°C	95	5.5	Normally to heavily soiled bed linen, table linen and underwear, towels, shirts etc. made of cotton and linen.	*	Yes	*	*	*	*	*	*	*	*	max.
Cotton	20 - 60°C	60 50 40 30	5.5	At a temperature of 80°C or more, this programme eliminates bacteria, ensuring sanitization of your laundry. The bacteria removal efficiency has been tested following a similar methodology to the NF EN 13697 standard of Nov. 2001.	*	Yes	*	*	*	*	*	*	*	*	max.
Synthetics	20 - 60°C	60 50 40 30	3.0	Normally soiled blouses, shirts, overalls etc. made of polyester (Diolen, Trevira), polyamide (Perlon, Nylon) or blends with cotton.	*	Yes	*	*	*	*	*	*	*	*	1000 ¹⁾
Daily load	20 - 60°C	60 40 60 40	3.0	Slightly to normally soiled textiles made of cotton and/or synthetics.	-	Yes	*	-	*	-	*	*	*	*	max.
Quick wash	20 - 30°C	30	3.0	Shortly worn outer clothing made of cotton, polyester, polyamide and blends with cotton.	-	Yes	*	-	-	-	*	*	*	*	max.
Delicates	20 - 40°C	40 30	1.5	Curtains and delicate clothing, dresses, skirts, shirts and blouses.	*	Yes	*	-	-	*	*	-	*	*	1000 ¹⁾
Jeans	20 - 60°C	60 40	5.5	Normally soiled cotton jeanswear and garments made of jeanslike material such as trousers and jackets.	*	Yes	*	-	-	*	*	-	*	*	max.
Lingerie	20 - 30°C	30	1.0	This cycle is particularly suitable to treat delicate lingerie (use of a laundry net strongly recommended).	-	Yes	*	-	-	-	*	-	*	*	400 ¹⁾
Wool	20 - 40°C	40	1.0	Only woollens with a felt-free finish, labelled with the woolmark and identified as machine washable. This programme (40°C) is tested and approved by The Woolmark Company for machine washable wool.	-	Yes	*	-	-	-	*	-	*	*	1000 ¹⁾
Handwash	20 - 40°C	40	1.0	Textiles made of silk, linen, wool and viscose marked as "handwashable". This programme (40°C) is tested and approved by The Woolmark Company for handwashable wool.	-	Yes	*	-	-	-	*	-	*	*	400 ¹⁾
Rinse & Spin	-	-	5.5	Same as the last rinse and the final spin in the "Cotton" programme.	-	-	*	-	-	-	*	*	*	*	max.
Spin	-	-	5.5	In this programme spinning is intensive. Same as the spin cycle in the "Cotton" programme.	-	-	-	-	-	-	*	-	-	*	max.
Gentle spin	-	-	1.0	In this programme spinning is gentle. Same as the spin cycle in the "Wool" programme.	-	-	-	-	-	-	*	-	-	*	1000 ¹⁾
Drain	-	-	-	Drain only - no spinning. Alternative method of terminating programme after "Rinse Hold".	-	-	-	-	-	-	-	-	-	-	-

*: optional / Yes : dosing required

¹⁾ For improved garment care, spin speed is restricted in these programmes.

The wool and handwash cycles of this machine have been tested and approved by The Woolmark Company for the washing of Woolmark garments labelled as "machine wash" or "hand wash" provided that the garments are washed according to the instructions on the garment label and those issued in this programme chart.

M0703

Whirlpool is a registered trademark of Whirlpool USA.

5019 312 10651

CONSUMPTION DATA					
Programme	Temperature (°C)	Load (kg)	Water (l)	Energy (kWh)	Approx. Programme Duration* (hours : minutes)
White Cotton / Antibacterial	95	5.5	55**	1.70	1:55
Cotton***	60	5.5	49	0.93	2:35
Cotton	40	5.5	53	0.55	2:00
Synthetics	60	3.0	54**	0.90	1:40
Synthetics	40	3.0	48	0.55	1:25
Daily load	40	3.0	43	0.48	1:00
Quick wash	30	3.0	36	0.30	0:30
Delicate	40	1.5	51	0.50	0:45
Jeans	40	5.5	73	0.55	2:14
Lingerie	30	1.0	42	0.30	0:31
Wool	40	1.0	53	0.50	0:45
Handwash	40	1.0	43	0.50	0:35

Consumption values were measured in normalized conditions in compliance with standard IEC/EN 60 456. Consumption data in the home may vary with respect to the values in the table in relation to the water supply pressure and temperature, the load and the type of wash.

* The remaining time indicator can deviate from the values in the table, because it takes into account the household conditions applicable at that time.

** To reduce the water temperature, some cold water is added at the end of the main wash cycle, before the pump drains the water out.

*** Reference Programme for Energy Label.

ADD DETERGENTS, CLOSE THE LID AND SELECT THE PROGRAMME

Add detergent as indicated on the front page and as described in the chapter “Detergent and Additives” in your Instructions for Use.

1. Turn the **programme selector** to the desired programme. The display shows the programme duration in hours and minutes as well as the predefined temperature. The **“Start/Pause”** button flashes.
2. The **temperature** can be altered by pressing the “Temperature” button.
3. The indication lamp of the predefined **spin speed** lights up; in case you want to set another spin speed, press the “Variable spin” button.

SELECT ANY DESIRED OPTION

Push the button(s) of any option(s) desired - the respective indication lights up.

When the combination of programme and additional option(s) is not possible, the indication lights switch off automatically. Unsuitable combinations of options are deselected automatically.

“Clean+” button

- Choose this option if you use an in-wash additive for stain removal (powder, for example “Vanish”) - it will optimize the additive's efficiency to get better wash performance and stain removal.
- Selectable for programmes “Cotton” and “Synthetics”; choose temperature of 30 or 40°C and use with maximum load.
- Add an appropriate amount of in-wash additive for stain removal (powder) to the main wash chamber, together with your detergent (only use powder detergent with this option). Respect the manufacturer's dosing instructions.

- Prolongs the programme by approx. 10 to 15 minutes.
- Appropriate for use of stain removers and bleaches on oxygen basis. **Chlorine or perborate bleaches must not be used!**

“Easy ironing” button

- Can be used together with “Cotton”, “Synthetics” and “Daily load” programmes to make ironing easier.
- Increases the water quantity and the clothes are spun very gently.

“Prewash” button

- Only for heavily soiled loads (for example sand, granular dirt) sensible. Increases the cycle time by approximately 15 min.
- Do not use liquid detergent for the main wash when activating the Prewash option.

“Intensive Rinse” button

- More water is added and rinse cycle is prolonged.
- This option is particularly suitable for areas with very soft water, washing baby linen and helping people with allergies.

“Rinse Hold” button

- The laundry remains in the last rinse water without progressing to the final spin cycle to avoid creasing and prevent colours from changing.
- This option is particularly recommended for the programmes “Synthetics”, “Daily load” and “Delicates”.
- It is particularly useful if you want to postpone spinning to a later time, or if you want to drain only.
- If you select “Rinse Hold”, do not leave items to soak for too long.

Note: The programme stops to “Rinse hold” at the time the “Rinse hold” light in the programme sequence indicator is on. The indication lamp next to the **“Start/Pause”** button flashes.

Terminate the “Rinse Hold” option:

- Press the **“Start/Pause”** button; the programme will terminate automatically with the final spin cycle for the present wash programme.

- If you do not wish to spin the clothes, turn the programme selector knob to the “Drain” programme and press the **“Start/Pause”** button.

“Variable spin” button

- Every programme has a predefined spin speed.
- Press the button to set another spin speed.
- If spin speed “0” is selected, the final spinning is cancelled but intermediate spin peaks remain during the rinse. The water is drained out only.

START DELAY

The “Start delay” button allows to run the machine at the consumer's convenience, for example at night when electricity is cheaper. Do not use liquid detergent when activating the “Start delay”.

- Select programme, temperature and options.
- Press the “Start Delay” button to select the delay time by 1 to 23 hours;
- Press the **“Start/Pause”** button. The indication light over the “Start delay” button flashes and the countdown of the delay time begins. The dot between hours and minutes of the delay time indicated flashes.
- The time delay indication disappears when the programme starts and it is replaced by the remaining programme time.
- Once having pressed the **“Start/Pause”** button, the number of hours preselected can be reduced by pressing and holding the “Start delay” button. From 1 hour on, the delay time can also be reduced in steps of 10 minutes.

To cancel the “Start delay”

..before you press the “Start/Pause” button:

- Turn the programme selector to another position or press the **“Reset”** button.

..after having pressed the “Start/Pause” button:

- Press the **“Reset”** button for at least 3 second - the start delay time disappears from the time display.

PROGRAMME START

Open the tap and press the **“Start/Pause”** button. The indication lamp next to the **“Start/Pause”** button lights up. The programme sequence indicator shows the current programme phase, running from left to right through Wash, Rinse, Spin/Drain.

The display shows the remaining programme time. Due to variations in load and temperature of inlet water, the remaining time is newly calculated in certain programme phases. If this is the case, **an animation appears on the time display.**

“DOOR OPEN” INDICATION

Before starting and after end of a programme, the lamp lights to show the the lid can be opened. As long as a wash programme is running, the lid remains locked and must on no account be forced open. In case you have an urgent need to open it during a running programme, refer to “Cancel (Reset) a running programme before the end”.

RED INDICATIONS

“Service”

Lighting up of the “Service” indication can be caused by a fault in an electrical component. Refer to the “Troubleshooting Guide” in your “Instructions for Use”; if the fault persists, contact our After Sales Service.

“Water tap closed”

The appliance has no or insufficient water supply. Open the water tap: if the indications still lights up, refer to the “Troubleshooting Guide” in the Instructions for Use.

“Clean pump”

Waste water is not pumped out. Check whether the drain hose is kinked or the filter must be cleaned: in the latter case refer to the Instructions for Use (“Removing the Filter”).

PROGRAMME END

- All the lights of the programme sequence indicator are off, and the “Door open” indication lights up.
1. Turn the programme selector to the “Off/O” position.
 2. Close the water tap.
 3. Open lid and drum and unload the machine.
 4. Leave the lid open for some time to allow the interior of the machine to dry.

CHANGE PROGRAMME AND/OR OPTIONS AFTER PROGRAMME START

1. Press the **“Start/Pause”** button to pause the programme. The light flashes.
2. Select the new programme, temperature, any options and another spin speed if you want.
3. Press the **“Start/Pause”** button again. The new programme continues at the same position where the previous programme was interrupted. Do not add detergent for this programme.

CANCEL (RESET) A RUNNING PROGRAMME BEFORE THE END

The **“Reset”** button cancels a programme before the end.

- Press the **“Reset”** button for at least 3 seconds; “rES” appears on the display. Any existing water is drained out before the lid can be opened.